



# HTC Droid Incredible MicroSD card Replacement

MicroSD card removal.

Written By: Andrew Optimus Goldberg



## INTRODUCTION

Use this guide to remove or replace your current MicroSD card. The Droid Incredible supports a MicroSD card up to 32 GB.

## Step 1 — Battery



- Press your thumbnail into the slot between the rear panel and the front case located in the bottom of the phone.
  - ⓘ Useful tip: a penny or dime works in a pinch if you can't use your thumbnail.
- Gently pry the rear panel up and away from the phone. You may need to slide your thumb up the crack to separate the rear panel from the front case.

## Step 2



- Remove the rear panel from the phone.



### Step 3



- Insert a fingertip into the gap between the battery and the rear inner frame, located between the battery and the speaker. Slide the battery away from the speaker, widening the gap.
- Lift the top of the battery up and remove the battery from the rear inner frame.

### Step 4 — MicroSD card



- Press the MicroSD card further into its slot until it clicks.
- Release the MicroSD card, and it will pop out slightly.

## Step 5



- Pull the MicroSD card straight out of its slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 03:17:49 AM.